

Printer Factory Reset Zebra

Instructions

Issue Date
6/28/23

Option 1

10 sec



Factory reset (ZD410)

1. Turn off the printer
2. Press and hold PAUSE (||) and FEED (+) buttons while turning on printer.
3. Release when indicator light turns on.

Option 2

10 sec




The network factory reset (network reset for Bluetooth/network card)

1. Turn off the printer
2. Press and hold PAUSE(||) and CANCEL(X) buttons while turning on printer.
3. Release when indicator light turns on.

Option 3

10 sec

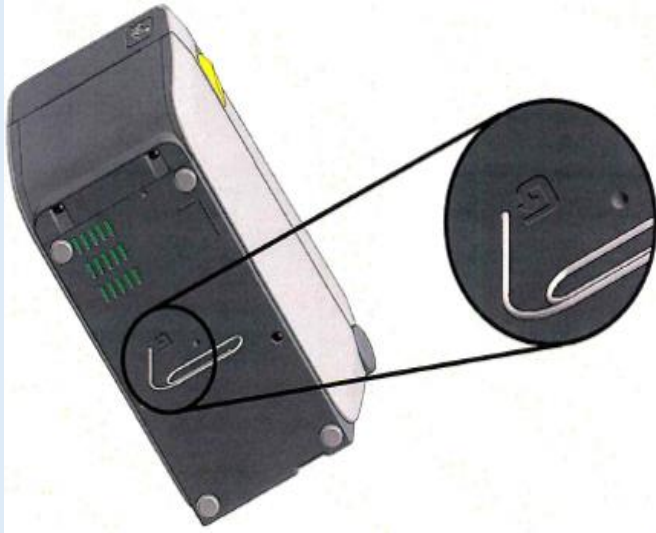

Reset Button

In addition to the power on configurations described previously, the ZD410 has a dedicated reset button located on the bottom of the printer which can be pressed with a paperclip or similar small object.

Pressing the button has the following results based on the length of the button press:

0-1 second	No action
1-5 seconds	Printer reset - Printer performs a factory reset and will automatically print a configuration label (and network label if present)
6-10 seconds	Net work reset - Printer drops connection to the network, and a network factory default set occurs. Upon completion of the reset, a configuration and network configuration label are automatically printed
More than 10 seconds	Exits the factory defaults function without resetting the printer or making changes