


Tablet Introduction

Instructions

Issue Date
6/29/23

1 Device layout

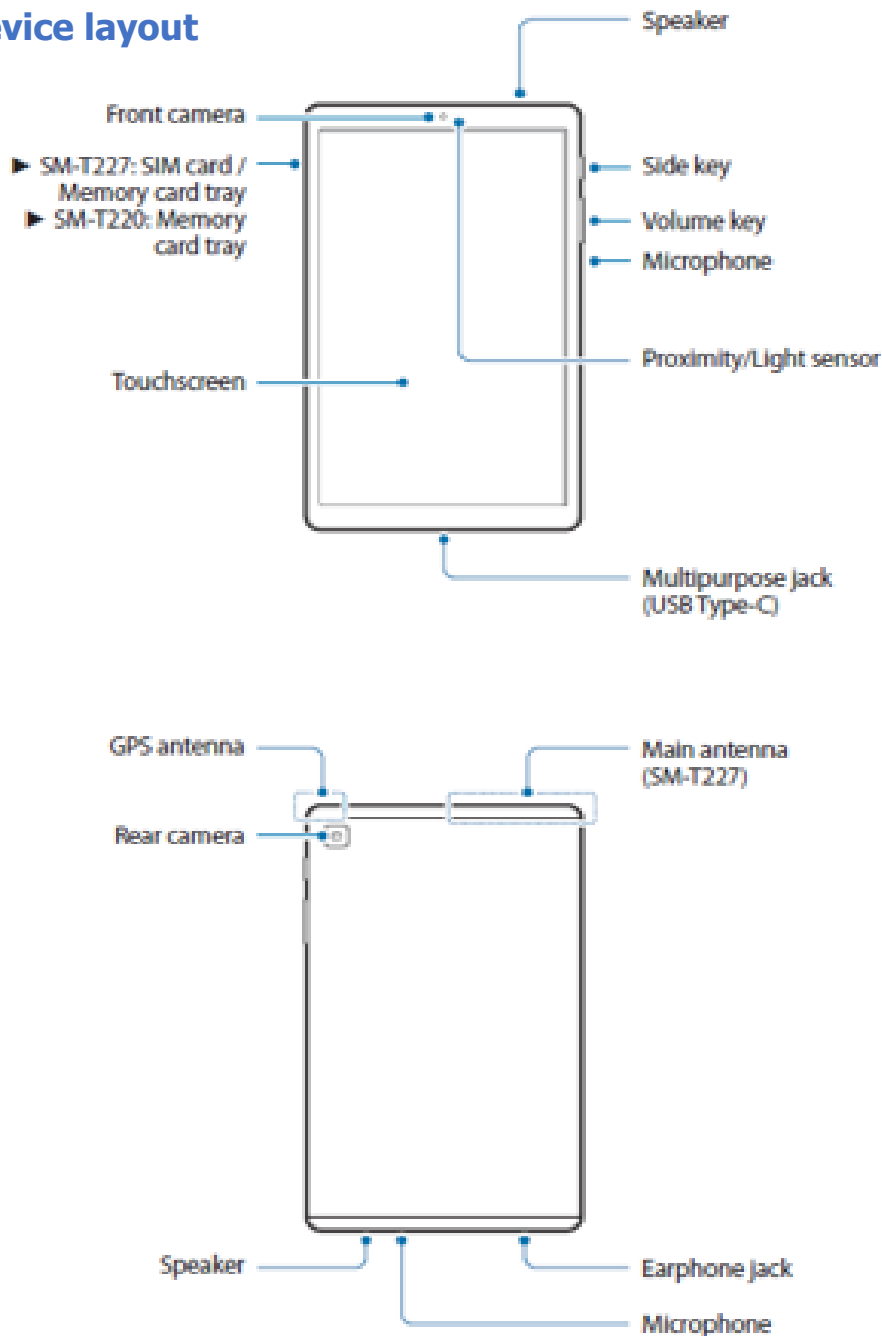

2


Keys and buttons

Hard keys

| Key | Function |
|-------------------------------|---|
| Side key | <ul style="list-style-type: none">• Press and hold to turn the device on or off.• Press to turn on or lock the screen.• Press twice to launch the app or feature you set. |
| Side key + Volume Down key | <ul style="list-style-type: none">• Press simultaneously to capture a screenshot.• Press and hold simultaneously to turn off the device. |

Select an app or feature to launch by pressing the Side key twice. Launch the Settings app, tap Advanced features - Side key, and then select an option you

Soft buttons

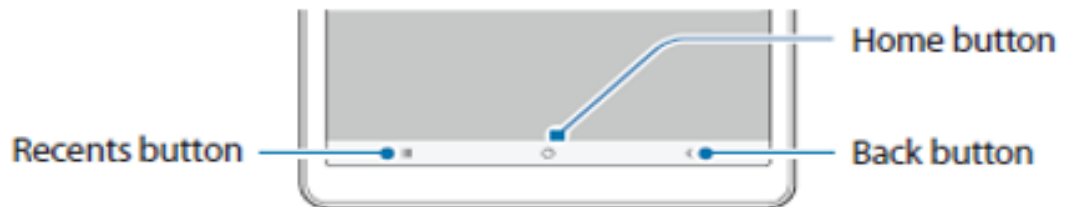

When you turn on the screen, the soft buttons will appear at the bottom of the screen. Refer to [Navigation bar \(soft buttons\)](#) for more information.

Navigation bar (soft buttons)

When you turn on the screen, the soft buttons will appear on the navigation bar at the bottom of the screen. The soft buttons are set to the Recents button, Home button, and Back button by default. The functions of the buttons can change according to the app currently being used or usage environment.



| Button | | Function |
|--------|---------|---|
| | Recents | <ul style="list-style-type: none">• Tap to open the list of recent apps. |
| ○ | Home | <ul style="list-style-type: none">• Tap to return to the Home screen.• Tap and hold to launch the Google Assistant app. |
| < | Back | <ul style="list-style-type: none">• Tap to return to the previous screen. |

3

Charging the battery

Charge the battery before using it for the first time or when it has been unused for extended periods



Only use a samsung-approved battery, charger, and cable specifically designed for your device. An incompatible battery, charger, or cable can cause serious injuries or damage to your device.




- ★ Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.
- ★ Only use a USB Type-C cable like the one supplied with the device. The device may be damaged if you use a Micro USB cable.



To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

Wired charging


Connect the Us cable to the USB power adapter and plug the cable into the devices multipurpose jack to charge the battery. Alter Tully charging, disconnect me charger from the device.

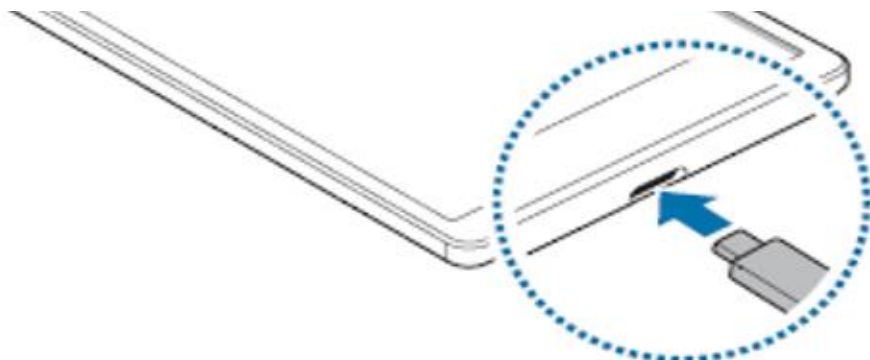

4 Turning device on and off




Follow all posted warnings and directions from authorized personnel in areas where the use of wireless devices is restricted, such as airplanes and hospitals.

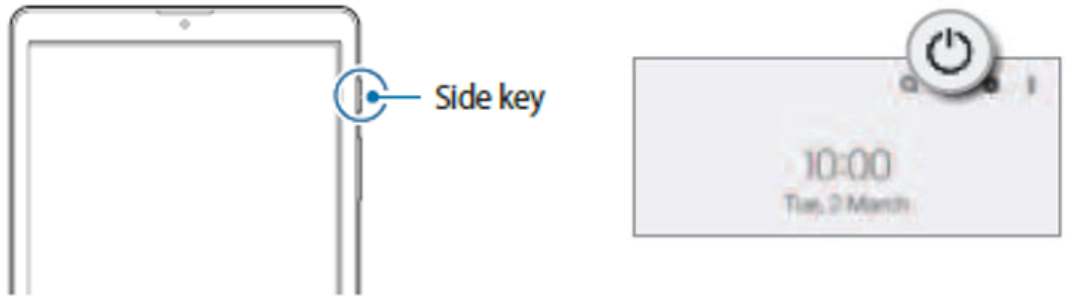

Turning the device on

Press and hold the Side key for a few seconds to turn on the device.

Turning the device off

1. To turn off the device, press and hold the Side key. Alternatively, open the notification panel, swipe downwards, and then tap .
2. Tap Power off.
To restart the device, tap Restart.

Forcing restart

If your device is frozen and unresponsive, press and hold the Side key and the Volume Down key simultaneously for more than 7 seconds to restart it.

5

Home screen and Apps screen

The Home screen is the starting point for accessing all of the device's features. It displays widgets, shortcuts to apps, and more.


The Apps screen displays icons for all apps, including newly installed apps.

Switching between Home and Apps screens

On the Home screen, swipe upwards to open the Apps screen.

To return to the Home screen, swipe upwards or downwards on the Apps screen.

Alternatively, tap the Home button or the Back button.

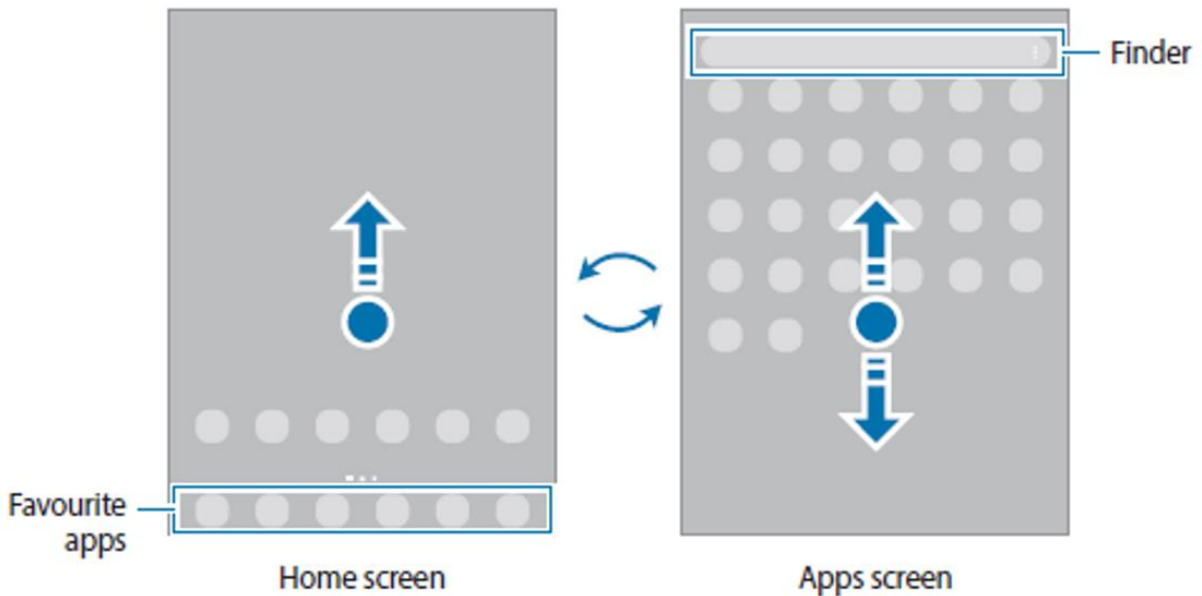

If you add the Apps button on the Home screen, you can open the Apps screen by tapping the button. On the Home screen, tap and hold an empty area, tap Settings, and then tap the Show Apps screen button on Home screen switch to activate it. The Apps button will be added at the bottom of the Home screen.



6

About tablet

Access your device's information.

On the Setting screen, tap **About tablet**.


To change your device's name, tap **Edit**.

- **Status Information:** View various device information, such as the Wi-Fi MAC address and serial number.
- **Legal Information:** View legal information related to the device, such as safety information and the open source licence.
- **Software Information:** View the device's software information, such as its operating system version and firmware version.
- **Battery Information:** View the device's battery status and information.

7

Display

Change the display and the Home screen settings.
On the Settings screen, tap **Display**.

- **Light / Dark:** Activate or deactivate dark mode.
- **Dark mode settings:** Reduce eye strain by applying the dark theme when using the device at night or in a dark place. You can set a schedule for applying dark mode.
 The dark theme may not be applied in some apps.
- **Brightness:** Adjust the brightness of the display.
- **Adaptive brightness:** Set the device to keep track of your brightness adjustments and apply them automatically in similar lighting conditions.
- **Eye comfort shield:** Reduce eye strain by limiting the amount of blue light emitted by the screen. You can set a schedule for applying this feature.
- **Font size and style:** Change the font size and style.
- **Screen zoom:** Make the items on the screen larger or smaller.
- **Screen timeout:** Set the length of time the device waits before turning off the display when it is idle.
- **Edge panels:** Change the settings for the Edge panel.
- **Navigation bar:** Change the navigation bar settings. Refer to [Navigation bar \(soft buttons\)](#) for more information.
- **Screen saver:** Set the device to launch a screen saver when the device is charging.



Some features may not be available depending on the model.